


MATS/BLANKETS SHOULD BE INSTALLED VERTICALLY DOWNSLOPE.

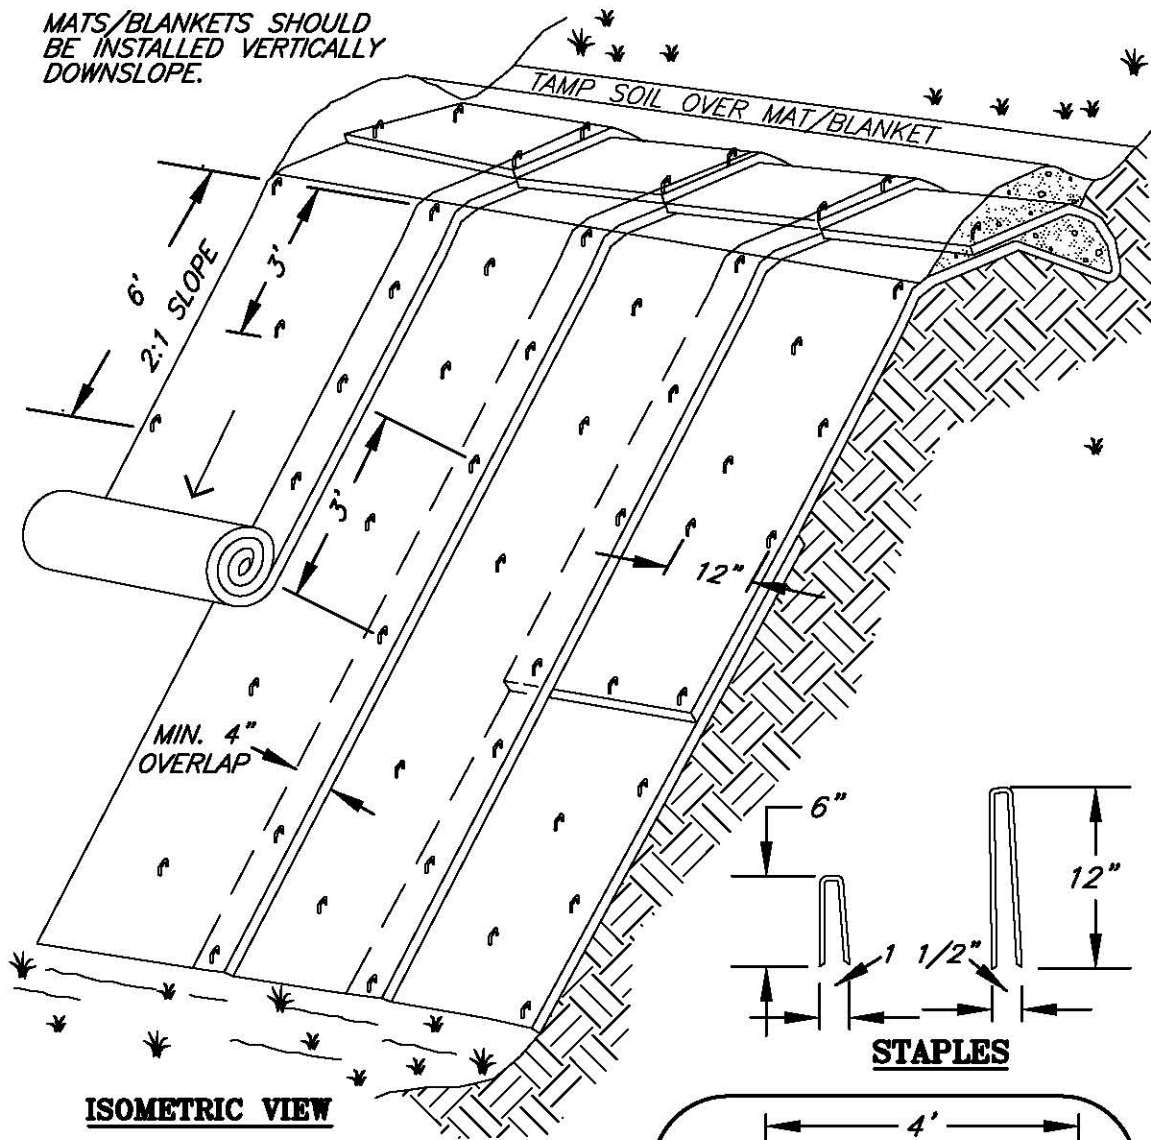


ISOMETRIC VIEW


**TYPICAL SLOPE
SOIL STABILIZATION**

NOTES:

1. SLOPE SURFACE SHALL BE FREE OF ROCKS, CLODS, STICKS AND GRASS. MATS/BLANKETS SHALL HAVE GOOD SOIL CONTACT.
2. APPLY PERMANENT SEEDING BEFORE PLACING BLANKETS.
3. LAY BLANKETS LOOSELY AND STAKE OR STAPLE TO MAINTAIN DIRECT CONTACT WITH THE SOIL. DO NOT STRETCH.
4. STAKING OR STAPLING LAYOUT PER MANUFACTURERS SPECIFICATIONS.

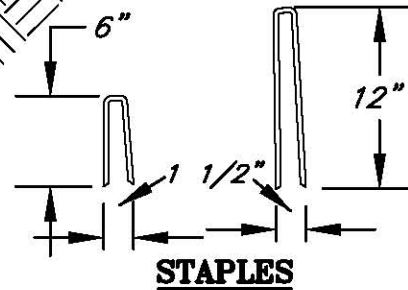

STAPLES

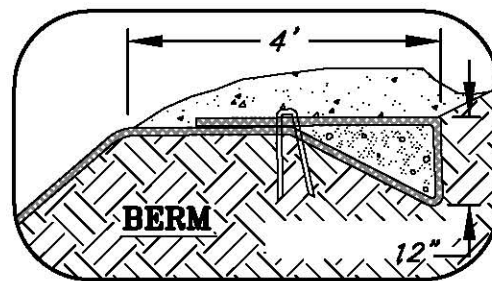

NOT TO SCALE

1994 JOHN McCULLAH

©

FILE: BLNKTSLP

MATTING - SLOPE INSTALLATION